



SINGLE-MODE PUMP LASERS

600 mW, 700 mW Kink-Free Output Power Options


AC1409 SERIES

The Gooch & Housego line of single-mode, cooled 980 nm pump lasers deliver >700 mW of kink-free fiber-coupled power. The modules are packaged using unique laser-weld packaging technology for high reliability over harsh operating conditions. Improved PER is achieved using advanced fiber pigtail construction techniques.

The hermetically sealed 14-pin butterfly package is available with a fiber Bragg grating and includes thermoelectric cooler, thermistor, monitor photodiode and UniDry™ getter. The fiber Bragg grating precisely locks the center wavelength over extended power and temperature range.

Center wavelengths in the range of 976 nm to 980 nm are available with tight wavelength control.

G&H's pump lasers are tested to meet the requirements outlined in Telcordia GR-468-CORE.

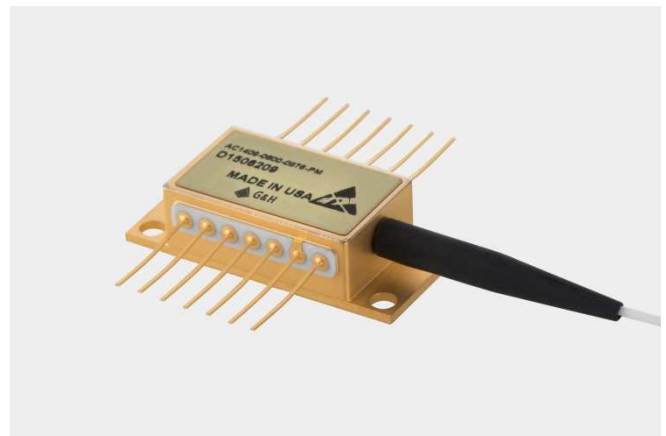

Wavelengths Available

- 974, 976, 980 nm and custom wavelengths available

Features

- Internal cooler and thermistor
- Optional fiber Bragg grating (FBG)
- Tested to Telcordia GR-468-CORE

Applications

- Defense
- Industrial
- Life sciences

Data tables

$T_{OP}=25^{\circ}\text{C}$, continuous wave, and beginning of life unless otherwise specified.

Optical Characteristics	Sym	Condition	Min	Typ	Max	Unit
Operating chip temperature	T_{CHIP}		20		35	$^{\circ}\text{C}$
Operating power	P_{OP}	Kink free power = 700 mW		650		mW
		Kink free power = 600 mW		540		mW
Center wavelength	λ_c	$P=P_{OP}$	See ordering information			
Wavelength tolerance	$\Delta\lambda$	With FBG	-1		+1	nm
		Without FBG	-5		+5	nm
Spectral shift with temperature	$\Delta\nu$	With FBG		0.01		nm/ $^{\circ}\text{C}$
		Without FBG		0.30		nm/ $^{\circ}\text{C}$
PER				17		dB
Power in band		@ $\lambda_c\pm 1\text{nm}$, $P>50\text{mW}$	90			%

Electrical Characteristics	Sym	Condition	Min	Typ	Max	Unit
Threshold current	I_{TH}				80	mA
Laser drive current	I_{OP}	Kink free power = 700 mW		1000	1200	mA
		Kink free power = 600 mW		900	1200	mA
Laser forward voltage	V_F	$P=P_{OP}$		2.0	2.7	V
Monitor photo diode current	I_{PD}		0.1		6.0	mA
Monitor photo diode dark current	I_D				100	nA
TEC current		$T_{amb}=25^{\circ}\text{C}$ for typ		0.4	3.5	A
TEC voltage		$T_{amb}=75^{\circ}\text{C}$ for max		0.3	3.5	V
Thermistor resistance	R_{TH}	$T=25^{\circ}\text{C}$	9500	10000	10500	Ω
Thermistor β coefficient	β	0 / 50°C		3892		


Fiber Characteristics	Min	Typ	Max	Unit
Fiber type, jacket material	PM, Hytrel Acrylate			
Core diameter	5.6	6.6	7.6	μm
Cladding diameter	123	125	127	μm
Buffer diameter	230	245	260	μm
Pigtail length with grating	1.5	3		m
Pigtail length without grating	1.0	1.3		m
Minimum band radius	35			mm
Proof strength	100			kpsi

AC1409 SERIES SINGLE-MODE PUMP LASER


Typical Operating Characteristics

$T_{OP} = 25^{\circ}C$


Output power and voltage vs laser diode input current.

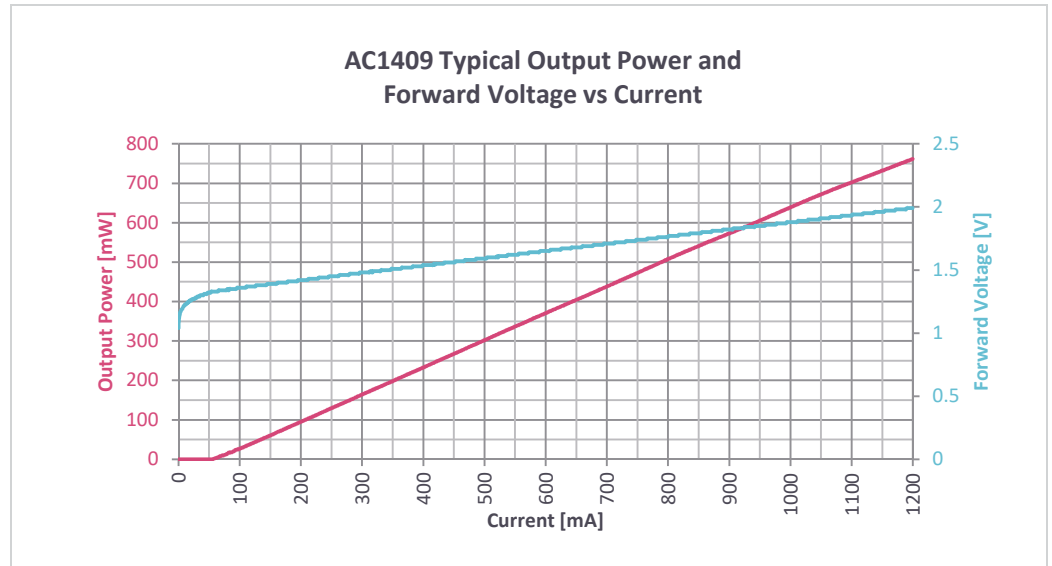

Typical spectrum

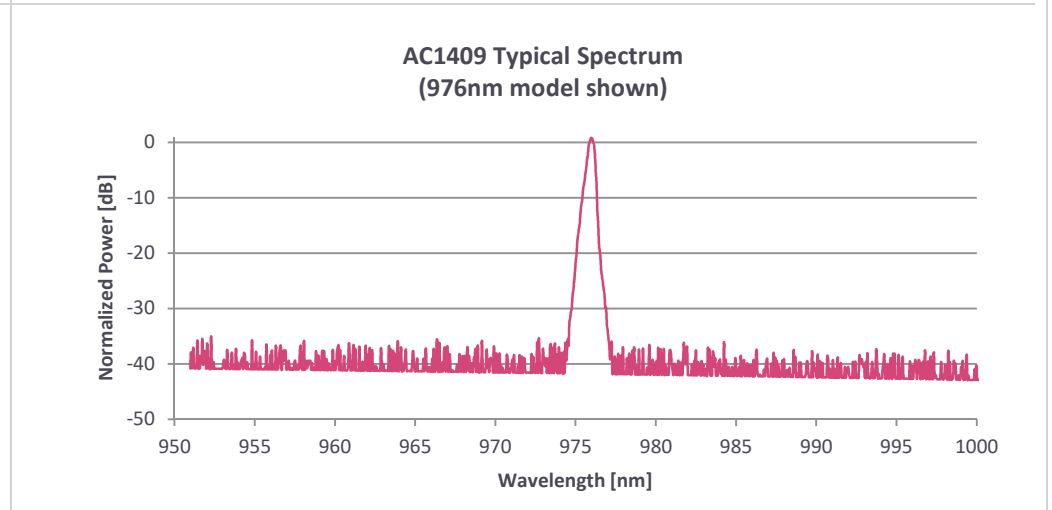


Typical back facet photodiode monitor current vs input current

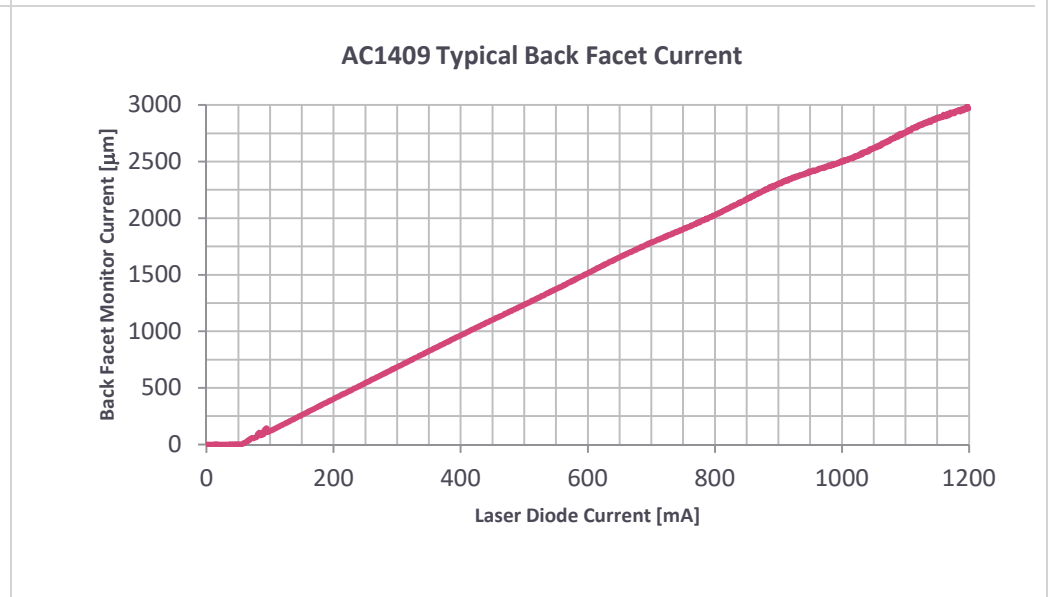

Pinout and Mechanical Drawing

Pin	Description	Pin	Description
1	TEC+	14	TEC-
2	Thermistor	13	Case GND
3	Monitor PD anode	12	NC
4	Monitor PD cathode	11	Laser cathode
5	Thermistor	10	Laser anode
6	NC	9	NC
7	NC	8	NC

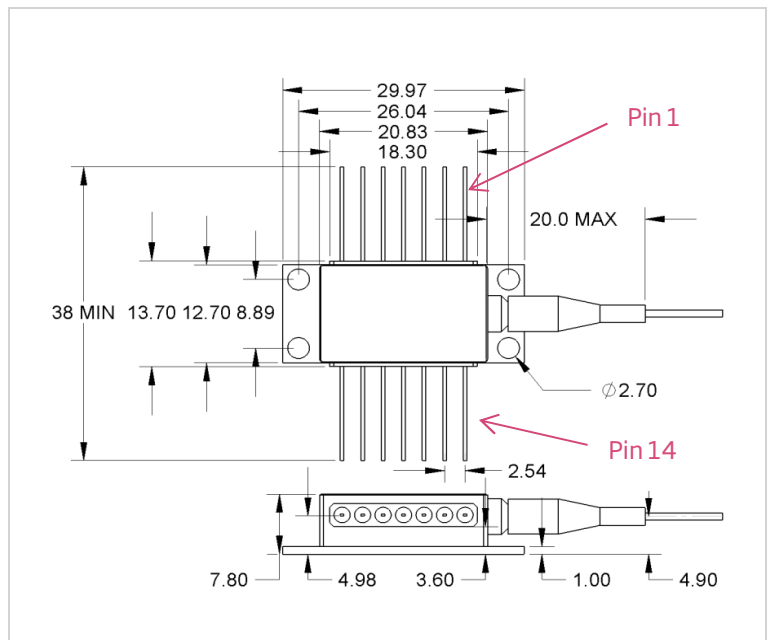

Absolute Maximum Ratings*	Sym	Min	Max	Unit
Storage temperature	T_{STG}	-40	+85	°C
Operating case temperature	T_{OP}	-20	+65	°C
Laser forward current	I_F		1.2	A
Laser reverse voltage	V_R		2.0	V
Photo diode photo current	I_{PD}		10	mA
Photo diode reverse voltage	V_{PD}		20	V
TEC current	I_{TEC}		6.0	A
TEC voltage	V_{TEC}		4.0	V
Thermistor current			2	mA
Thermistor voltage			5	V
Lead soldering time			10	s
Lead soldering temperature			250	°C
ESD (human body model)			500	V

* Stresses beyond those listed under "Absolute Maximum Ratings" may cause permanent damage to the device. These are stress ratings only and operation of the device at or beyond these conditions is not implied. Exposure to absolute maximum ratings for extended periods of time may affect device reliability.

Ordering Information

Example part number: AC1409-0976-0700-PM

Order code				①	②				③				④		
A	C	1	4	0	9	-					-				
①	Model	Standard													
	Code	AC1409													
②	Kink free power	600 mW						700 mW							
	Code	0600						0700							
③	Wavelength¹	974 nm				976 nm				980 nm					
	Code	0974				0976				0980					
④	Fiber type	Polarization-maintaining				Single-mode fiber (non PM)				No grating					
	Code	PM				SM (976 only)				00					

¹ Other wavelength options available, contact sales for more information.
Contact sales if connector required.

For further information

T: +1-781-275-7501
E: boston@goochandhousego.com

goochandhousego.com